

## BRAC Radio Info Sheet



- 1. Lock Button** – Should be locked when you get it. All radios should be pre-set so the bottom frequency on the screen is 452.125. The pre-set top frequency is 138.550. Hit the button until it says, “unlocked” if you really need to change something.
- 2. Push to Talk Button** – In a perfect world, this is the only other button you need to know about.
- 3. Light Switch** – You will hit this by accident. It toggles through turning on the little light on top, either for a flashlight or for a flasher. Push it again to toggle to different functions.
- 4. Call Button** – Turns on the FM radio. **Don't do this.**
- 5. A/B Selector** – Toggles from the A set (top screen) to the B set (bottom Screen). Currently the B set should be selected.
- 6. Channel/Frequency Mode** – Currently set on Channel mode, which selects up to 10 pre-set frequencies. Currently set to Channel 1, which reads 452.125. If you want to use the VHF frequency, toggle to the top screen, A, by using the A/B selector described above.

**What do I do if my channel is not showing 452.125?**

- 1. Push the unlock button until it says it is unlocked**
- 2. Toggle on the orange Frequency button (6) until it says, “channel mode”**
- 3. Toggle on the blue A/B button until the little triangle icon is on the bottom set of numbers.**
- 4. Play with the up and down triangle buttons on the keyboard until it says “one” and is displaying 452.125 on the bottom of the screen.**
- 5. You can do the same for the A by switching to A before adjusting the channel.**